


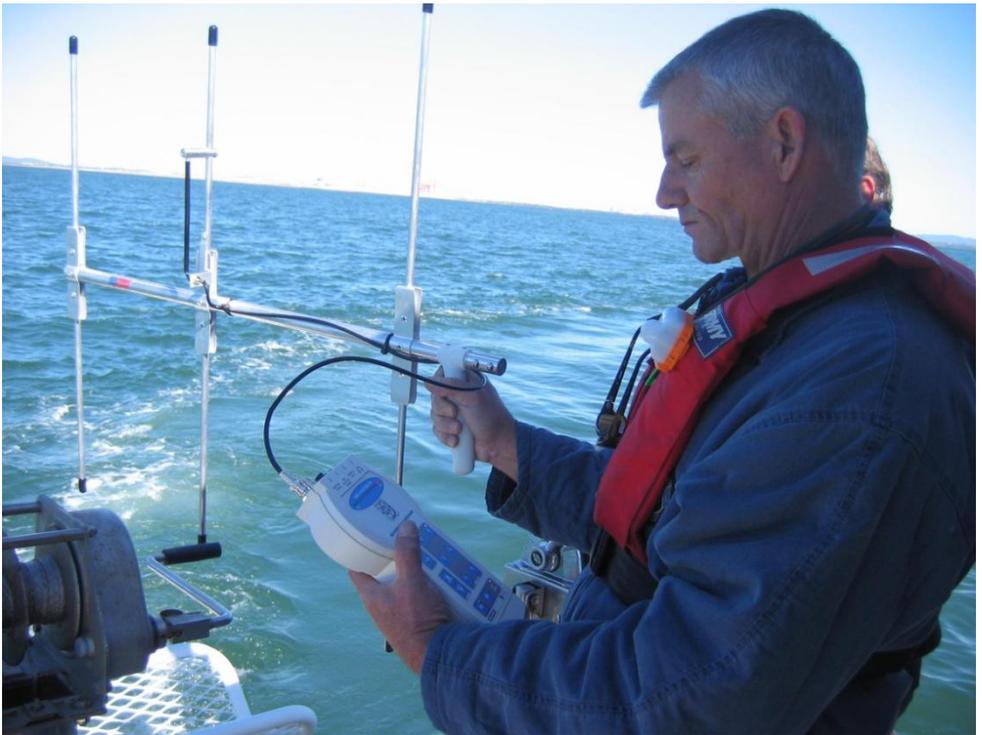

**SEASAFE MODEL SSRX/01
MAN-OVERBOARD AND LOST DIVER ALARM & TRACKING
RECEIVER**

INSTALLATION & OPERATION MANUAL



www.sea-safe.com.au

Contents	Page
1. Technical support	3
2. Warranty	3
3. Regulatory compliance	3
4. Box contents	3/4
5. Receiver Layout and Controls	5
6. Equipment introduction	6
7. Equipment specification	6
8. Installation	6
8.a Receiver	6
8.b Power/auxiliary output cable	7
8.c Omni-directional antenna	8
8.d Collapsible directional-antenna	8
9. System operation	9/10
10. Signal tracking procedure	11
11. Accessories	12
12. Copyright	12
13. Warranty registration	13

1. Technical Support

For any technical questions or for support, please contact your local Seasafe distributor or visit:

Internet: www.sea-safe.com.au
Email: info@sea-safe.com.au
Telephone: +61 7 3390 2287

2. Warranty

Seasafe warrants this product to be free from defects in materials and workmanship for 12 months after the date of purchase. If your Seasafe Receiver is found to be defective within that time, we will promptly repair or replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Warranty registration at www.sea-safe.com.au

3. Regulatory Compliance

This device complies with AS 4268.2 as amended by LIPD (Low Interference Potential Device) 24 August 2005. In particular table ZZ1.


Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including any interference that may cause undesired operation.

- a.  N15546
- b.  1999/5/EC (ETSI EN 300 220-2, ETSI EN 300 220-1, ETSI EN 301 489-1, ETSI EN 301 489-3, EN 61000-3-2, EN 6100-3-3)
- c. AS 4268.2

4. Box Contents

Included in the purchase of the Seasafe SSRX/01 Alarm & Tracking Receiver are the following components:

- ◆ Seasafe Model: SSRX/01 Alarm & Tracking Receiver
- ◆ Mounting cradle
- ◆ 6 x NiMH rechargeable batteries (installed by dealer upon purchase)
- ◆ Audio headset
- ◆ Power cable & connector
- ◆ Signal Attenuator module
- ◆ Marine omni-directional antenna (not in box)
- ◆ Portable collapsible directional antenna (not in box)
- ◆ Instruction manual

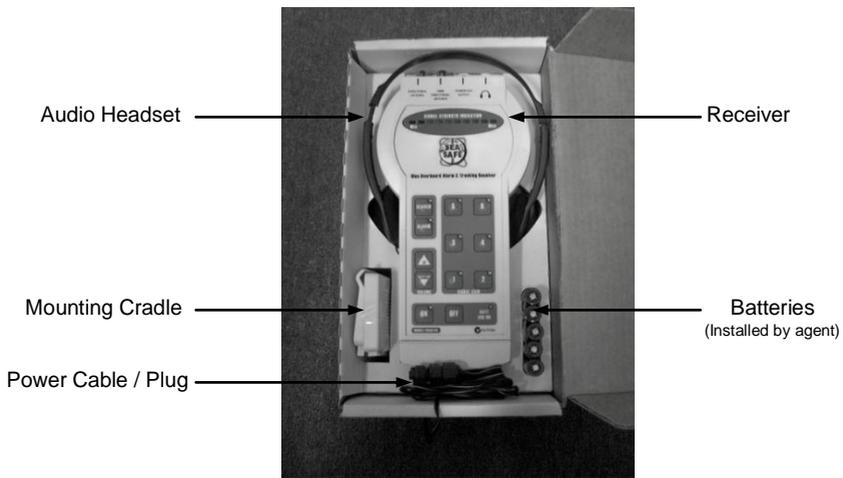

Seasafe SSRX/01 Receiver Box Contents

Omni- Directional and Directional Antennae are not supplied in the box but are supplied as part of the kit



Omni-Directional Antenna




Directional Antenna folded for easy stowage



Directional Antenna unfolded for use

5. Seasafe Model: SSRX/01 Receiver Lay-out & Controls

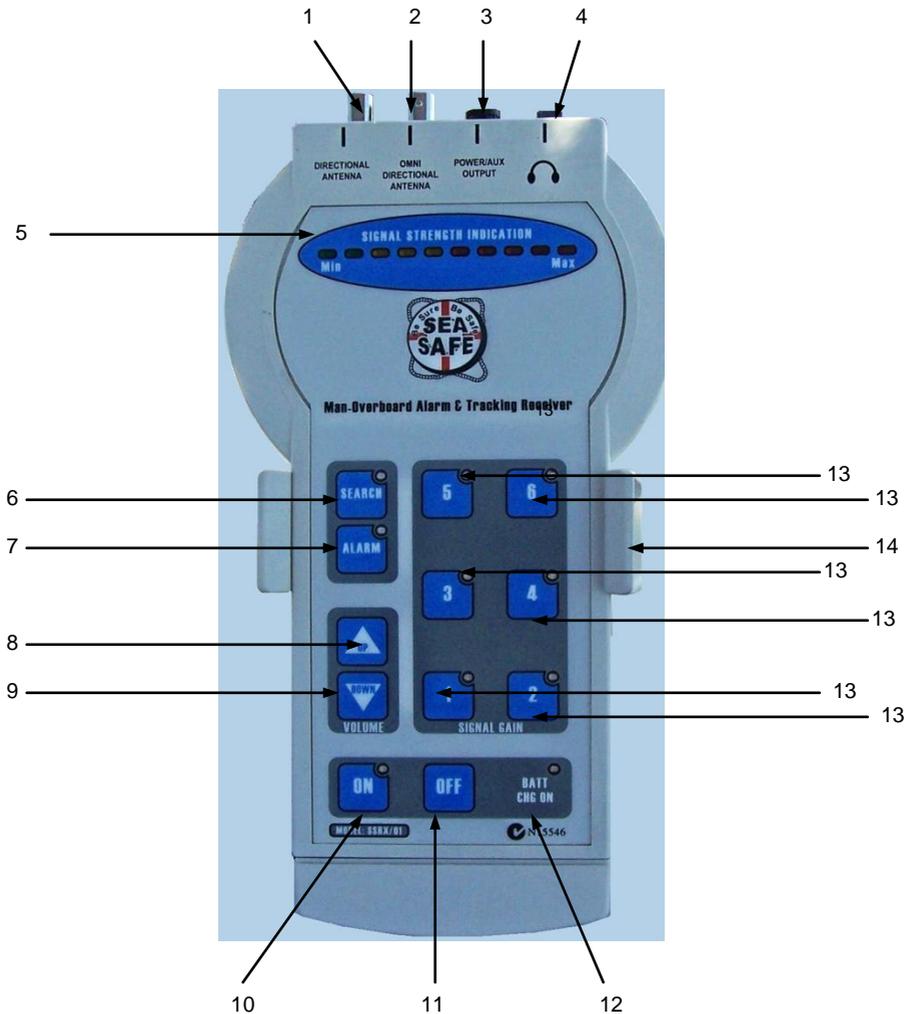

- 1..... Directional Antenna Input / Plug
- 2..... Omni-Directional Antenna Input/Plug
- 3..... Power Plug / Auxiliary Output
- 4..... Audio Headset Input
- 5..... Visual Signal Strength Indicator
- 6..... 'Search' Selector Switch
- 7..... 'Alarm' Selector Switch
- 8..... 'Volume Up' Switch
- 9..... 'Volume Down' Switch
- 10..... 'Power On' Switch
- 11..... 'Power Off' Switch
- 12..... 'Battery Charge On' / Vessel Power Indicator
- 13..... 'Signal Gain Adjustment Switches'
- 14..... Receiver Mounting Cradle

6. Equipment Introduction

Congratulations on your purchase of the Seasafe SSRX/01 Alarm and Tracking Receiver. Used in conjunction with the Seasafe SSTX/01 or SSTX/DV Personal Transmitters, the Seasafe system represents a major breakthrough in personal tracking and location technology.

Please remember that the Seasafe system is an Aid to rescue only and DOES NOT guarantee your safety. This at all times remains the responsibility of the individual.

Before using the Seasafe system is important that you ensure the equipment complies with any or all standards and regulations which may pertain to the prospective country/s in which you intend to use the system.

The Seasafe system is a stand-alone and self-contained Alarm, Tracking & Location system. It operates independently of traditional EPIRB satellite and International Emergency Frequency based systems. Seasafe allows non-critical and critical situations to be responded to immediately at the time and place at which they occur. The system is not reliant on a response from National or International Search & Rescue Authorities.

The Seasafe system may be used in any marine or land-based pursuit whereby a person may become lost, disorientated or in need of assistance.

Upon purchase, please be sure to complete the warranty registration form at the back of this manual or the on-line Product Warranty Registration at www.sea-safe.com.au

7. Equipment Specification

Frequency.....	173 - 174 MHz
Frequency Stability.....	15 PPM
Dimensions.....	256mm L x 130mm W x 60mm D
Weight (with batteries).....	+/- 850 g
Temperature Tolerance.....	-10° C to +55° C
Decode Sensitivity.....	- 128 DBM nominal
Adjacent channel selectivity.....	80 DB
Image and Spurious responses.....	-80DB
Spurious Radiation.....	< 57 DBM
Power.....	12 VDC via 6 x internal 1.2V NiMH AA rechargeable batteries
'C-Tick' compliance registration number.....	N15546
Australia / New Zealand Compliance.....	AS 4268.2
European CE conformance.....	1999/5/EC

8. Installation (To be carried out by a qualified Marine or Automotive Electrician only)

a. Receiver

The Seasafe Receiver may be operated either in-hand (portably) or via the dash-mount cradle. If using the cradle, you should select a position on the vessel where the receiver will be clearly visible to the skipper, protected from direct sunlight (if possible) and protected from direct exposure to moisture (rain, spray, breaking waves etc). The cradle should be attached to the vessel dash-board or bulk head via two self tapping screws (preferably stainless steel). Two appropriate sized holes should be drilled and the cradle attached by the use of the two self-tapping screws. Once the cradle has been attached to the vessel, the receiver can be slid into position. The receiver can be removed from the cradle at any time and either operated in-hand or even removed from the vessel for portable operation. If the receiver is to be used outside of the cradle, ensure that the omni-directional antenna is plugged into the receiver in order for the device to receive emergency transmitter signals. The only time the omni-directional antenna should be unplugged is when an alarm has been received and the directional-antenna has been plugged into the unit in order to "search" for the source of the alarm. When a search has been completed, the receiver should

be returned to stand-by mode and the omni-directional antenna should be plugged into the unit once more. For portable operation, the receiver batteries will need to be fully charged. The batteries are automatically charged when the receiver is connected to the vessel 12 VDC power supply. Batteries are installed by the Seasafe dealer upon purchase of the equipment and are not replaceable by the user. Whilst the receiver is connected to the vessel's power it will run off this power source at the same time the internal batteries will be charged. When disconnected from the vessel's power source, the receiver will operate off the internal battery supply.



Receiver Mounting Cradle
Un-assembled

Receiver Cradle
mounting holes
(use appropriate hardware
for mounting surface)



Receiver Mounting Cradle
Assembled




Receiver mounted in cradle

b. Power / Auxiliary Output Cable

The receiver is supplied with a connection cable and plug. The cable consists of three wires. A red 'positive' power connection wire, a black 'negative' connection wire and a white 'auxiliary' output connection wire. Connection of the Seasafe Receiver Power and Auxiliary Output cable should only be performed by a qualified marine or automotive electrician. The red wire is supplied with an in-line fuse which will protect the receiver in the event of a short-circuit or electrical system overload. The red wire must be connected to the positive 12 VDC power supply on the vessel. The black wire must be connected to the negative or ground power supply of the vessel. If a vessel has only 24 Volt DC power available, a 24 volt to 12 volt DC converter should be used.

The white wire is an auxiliary or optional output from the receiver. In the event of an 'alarm' signal being received by the receiver, an output is automatically transmitted through this white wire. This output signal may be used to activate an 'engine cut-out', a flashing light, an external alarm klaxon or may even be interfaced to an external MOB input on certain marine electronic GPS and navigation systems. If utilising this auxiliary output signal, it **MUST** be connected to any peripheral equipment via an external relay. This must be performed by a qualified marine or automotive electrician. Once the power cable has been connected to the vessel power (vessel power should be switched on), the receiver is now ready for operation.

Typical 'Alarm Output' connection to peripheral device via external relay

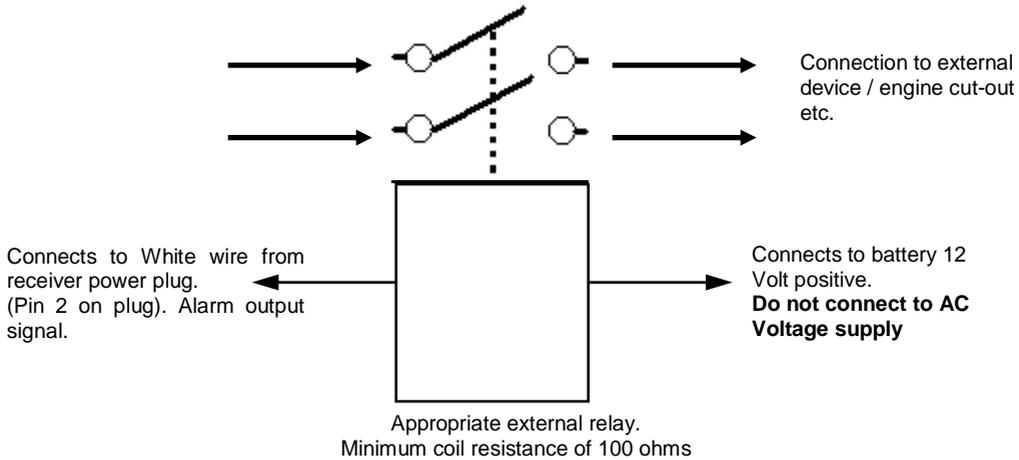

c. Omni-Directional Antenna

The omni-directional-antenna is a marine grade antenna which has the capability of receiving a Seasafe Transmitter signal within 360 degrees, provided the Transmitter is within signal receiving range. The higher this antenna is mounted on the vessel, the greater the receiving range of the system. Therefore the omni-directional antenna should be mounted at the highest practical point on the vessel. The antenna should be mounted using the antenna mounting bracket (supplied) and stainless steel fasteners (not supplied). The coaxial antenna cable should be run from the antenna to the Receiver ensuring that the cable is not exposed or in a position to be damaged in any way. The coaxial cable plug must be connected to the receiver input connector marked "omni-directional antenna".

d. Collapsible Directional-Antenna

The directional or Yagi antenna is a portable hand-held powder coated marine grade aluminium antenna. It should be safely stowed in the vessel folded up where it is easily accessible in case of an emergency. In the event that it is required to use this antenna, it should be removed from its plastic sleeve and the folded elements should be folded out for use. The coaxial cable attached to the antenna must be connected to the input marked "directional-antenna" on the receiver. The "directional-antenna" may be mounted on the vessel in a semi-permanent position utilising suitable 'U' bolt and nuts.



"directional-antenna" unfolded for use



"directional-antenna" folded for easy stowage when not in use

9. System Operation

Once the receiver and omni-directional antenna have been correctly installed, the Seasafe Receiver is ready for operation. To switch the system on, depress the "on" key. Once the "on" key has been depressed, the "alarm", "on" and signal gain button "6" will be illuminated. If the receiver is connected to the vessel power, the "BATT CHG ON" indicator will also be illuminated. This indicates that the internal batteries are being charged. Each time the receiver is switched on, the device will default to these settings. If the "BATT CHG ON" indicator fails to illuminate when connected to the vessel power, please first check that power is being supplied to the receiver and also check the condition of the in-line fuse. Provided there is power to the device and the fuse is operational, if the receiver "BATT CHG ON" still fails to illuminate then return the receiver to your closest Seasafe dealer for inspection and possible battery replacement.

If the receiver is removed from the vessel power source, the "BATT CHG ON" indicator will no longer be illuminated. However, continued use of the receiver is possible as the receiver will be powered by the internal batteries. The length of time the receiver is able to operate in this mode is dependent on whether the internal batteries are fully charged. The receiver may continue to operate for up to 3 hours on a full charge. It is not recommended to operate the receiver in portable mode for extended lengths of time. As the internal battery power decreases, the range and accuracy capabilities of the receiver are reduced substantially and normal operation becomes unreliable. The receiver should only be used in the portable mode (disconnected from vessel power) in absolute emergencies only.

The receiver is now ready to receive any emergency signal transmitted by a Seasafe transmitter (SSTX/01 or SSTX/DV) which is within range.

If a Seasafe transmitter is activated within range of the receiver, the receiver's in-built alarm siren will emit a high pitched audible alarm tone. The volume level of this alarm is factory set and cannot be adjusted. At the same time, a number of "signal strength indicator" lights will be illuminated. The more lights which are illuminated on the "signal strength indication", the stronger the signal being received. At this point the operator or skipper should depress the "SEARCH" button. This button will become illuminated and the "ALARM" button will no longer be illuminated. The omni-directional antenna must now be unplugged from the receiver and the collapsible directional-antenna must be unfolded and plugged into the receiver socket marked "directional antenna". (The omni-directional antenna need only be unplugged if the receiver is to be used portably. The receiver automatically switches between omni and directional antennae when the receiver is switched from "Alarm" to 'Search' mode). The receiver will begin to emit a warbling audible tone. This is an audible signal strength indication. The volume level of this audible signal strength indicator is adjustable either up or down via the volume "UP" or "DOWN" buttons. The directional antenna is held in the hand in the vertical plane (see picture over page) and the operator should very slowly rotate the antenna through 360 degrees. If the directional antenna is permanently fixed to the vessel then the vessel should be slowly manoeuvred through 360 degrees. The visual and audible signal strength indicators will vary as the antenna is moved. The point within 360 degrees where the most signal indicator panel lights are illuminated and where the audible tone is most highly pitched, will indicate the approximate direction from which the transmitted signal is being received. If maximum signal strength is received through an arc (say 90 degrees) then the vessel should proceed directly towards the middle point of this arc. See diagram over page. The vessel must now move in this direction whilst the operator continues to scan with the directional antenna. As the vessel gets closer to the transmitter signal source, the visual and audible signal strengths will increase. In order to narrow the search angle or arc, the operator should now start to systematically depress the "SIGNAL GAIN" switches down from number "6". The signal strength indications will reduce in intensity. Again, if the strongest signal is received through an arc then the boat should proceed towards the centre position of this arc. If the vessel has an on-board compass, then a compass bearing can be used to obtain the direction of the centre of this arc. The operator should randomly continue to rotate the antenna through 360 degrees to check for any other transmitted signals as there may be more than one activated transmitter at a time. By continuing to reduce the signal gain and to follow the direction of the strongest received signal, the vessel should eventually come in visual contact with the victim and they can be safely retrieved. If on 'GAIN POSITION 1' maximum signal strength is being received through 360 degrees and the victim is not visible, the directional antenna may be unplugged from its socket and plugged into the 'Omni-Directional' antenna socket. This will allow the victim to be tracked even closer. If the victim is still not visible, the BNC attenuator module can be plugged into the '**OMNI-ANTENNA**' socket and the '**DIRECTIONAL ANTENNA**' plugged into the attenuator. This should provide a location accuracy within 5 to 10 metres. The attenuator module only need be used if the victim is not visible already. The attenuator module **MUST** be removed when tracking is complete. Once a

victim has been retrieved, their Seasafe transmitter should be deactivated. Assuming there were no other victims in the water at the same time, the receiver audible and visual signal strength indications should cease. If the receiver continues to receive a signal, the same search procedure should be followed and any other victims located and retrieved.

Once all victims have been retrieved, the receiver should be switched "OFF" and then "ON" to return it to its default stand-by mode. If the system has been used in the portable mode, the directional-antenna must be unplugged from the receiver, folded up and stowed safely for future use and the Omni-directional antenna must now be immediately plugged into the receiver to scan for any future alarms.



Attenuator Module




Receiver with attenuator and Tracking antenna plugged into Omni-Directional Antenna Port




Tracking a Seasafe Personal Transmitter signal using Seasafe Receiver and Directional Antenna (note: the antenna is held in the vertical plane). Receiver is being used in the portable mode with the optional rubber protection holster and neck-strap

SIGNAL TRACKING PROCEDURE

MAXIMUM SIGNAL STRENGTH



MAXIMUM SIGNAL STRENGTH




MOVE BOAT TOWARDS CENTRE OF MAXIMUM RECEIVED
SIGNAL STRENGTH ARC




RECEIVER SET ON 'GAIN' POSITION 6

REPEAT PROCEDURE ON NEXT GAIN POSITION (5) ETC

MAXIMUM SIGNAL STRENGTH



MAXIMUM SIGNAL STRENGTH



MOVE BOAT TOWARDS CENTRE OF MAXIMUM RECEIVED SIGNAL
STRENGTH ARC
(THIS ARC GETS SMALLER AS THE GAIN IS REDUCED AND AS THE BOAT
GETS CLOSER TO THE TARGET)



KEEP REPEATING THIS PROCESS AND REDUCING THE 'GAIN' UNTIL TARGET IS LOCATED.

The Seasafe receiver may receive transmitter signals up to the following ranges:

- ◆ Up to 5 km – 10 km from water to vessel (antenna at 2m above sea level)
- ◆ Up to 10 km – 20 km from water to vessel (antenna at 5m above sea level)
- ◆ Up to 20 km – 30 km from water to base station (with 15m high antenna mast)
- ◆ Up to 100 km from water to aircraft at 1500 m altitude

These ranges are not guaranteed and signal transmission ranges may be affected by a number of factors including but not limited to, prevailing weather conditions, sea state, wave height, cloud cover, proximity to land masses and line of sight obstructions.

10. Accessories

a. Rubber Protection-Holster & Neck Strap (Optional)

The protection holster and neck strap allow the receiver to be comfortably used in a portable mode. The rubber holster provides additional protection against unintentional physical abuse. The receiver can be hung around the neck and quite easily operated in conjunction with using the directional antenna.



Simply fit the receiver into the protection holster for portable use. Can be hung around the neck for ease of use

b. Audio Headset (Standard)

The Seasafe receiver is supplied complete with a lightweight audio headset. Under conditions of extreme ambient noise or in cases where the skipper is unable to watch the 'visual' signal strength meter, the headset can be plugged into the device and used to track the received audio signal. The volume level of the audible signal strength indicator is adjustable up or down via the volume "UP" or "DOWN" buttons.

c. Portable System Case and in-built antenna (Optional)

This option comprises a heavy duty water/dust proof case with a 30cm stubby omni-antenna built in. The receiver is stored in the case and connected to the stubby antenna. This provides total portability but it should be noted that using this system with the stubby antenna will reduce the signal range down to approximately 3 km dependant on prevailing conditions.



11. Copyright

Copyright Seasafe Pty Ltd 2010
International Patents Pending
Specification subject to change without notice

E & OE



WARRANTY REGISTRATION CERTIFICATE

Date of purchase.....

Place of Purchase.....

Authorised Dealer Name.....

Authorised Dealer Address.....

Authorised Dealer Contact

Model Number of Equipment.....

Serial Number of Equipment.....

Name of Purchaser.....

Address of Purchaser.....

Authorised Dealer Stamp

I have read and understand the terms of this warranty.

Signed by Purchaser